

INSTRUCTION SHEET

FIRST USE

Please open the bottom cap to remove the insulation sheet inside the flashlight before use. For optimal performance, it's recommended to fully charge the flashlight before use.

ON/OFF Button Bottom cap Remove the insulation sheet

RECHARGE

If the indicator displays a low battery or if the brightness is dim, please recharge the flashlight using the USB charging cable. For best results, fully charge the flashlight before its first use.



SWITCHING ON AND OFF

Long Press = Turn on/off 1st Mode = Strong light 2nd mode = Medium light 3rd Mode = Low light Short Press = Changes Mode 4th Mode = Flash 5th mode = SOS



SPECIFICATIONS

Light output >1000lm (High), >250lm (Low) **Battery** 3.7V Li-ion Charging voltage DC 5V Charging time >7h Run time >4h (High) **Dimensions** ⁴ 49 X 185mm Light bulb White laser Zoom mode Telescopic zoom

LOTUS ATTACK HEAD



TYPE-C COMPATIBLE PHONE CHARGING



26650 LITHIUM BATTERIES









IMPORTANT INFORMATION

- Please keep this instruction sheet for future reference.
- Keep the flashlight away from fire, direct sunlight and high temperature in case of explosion.
- Store in a dry place and keep clean by wiping with a damp cloth.
- Recycle or dispose of used batteries as stipulated by local regulation.

SAFETY

- DO NOT shine the torch directly into people's eyes.
- DO NOT allow children under the age of 3 years to use this flashlight.
- DO NOT use the flashlight if you suspect the battery or casing is damaged.
- DO NOT expose to temperatures above 60 degrees celsius.
- DO NOT dispose of the flashlight yourself by burning it or throwing it in the trash.

