

Fitting Instructions for Mann Provent 200 Catch Can Kit

KIT No: OS-PROV-13



**Toyota Prado (2015) 2.8 Ltr
IGD-FTV Turbo Diesel GDJ150R-GKTEYQ**

KIT INCLUDES:

- 1x Provent 200 unit
- 1x Vehicle specific bracket
- 1x Drain kit
- 2x Bolts, 2x washers & 2x nuts
- 4x Clamps

INSTRUCTIONS:

STEP 1: Ensure engine is off and cool.

STEP 2: Remove engine cover, lifting at the front to tilt and then pull forward (see images 1 & 2).



Fitting Instructions for Mann Provent 200 Catch Can Kit

STEP 3: Identify two the two bolts connecting the intake system (img3).


STEP 4: Fit supplied stainless bracket & Provent unit (img4).



STEP 5: Install drain hose sliding down between inner guard and wheel arch & tighten hose clamps (img5).

STEP 6: Trim hose to desired length and fasten with cable tie. (img6)

*Ensure ball valve is in horizontal (closed) position (img7).

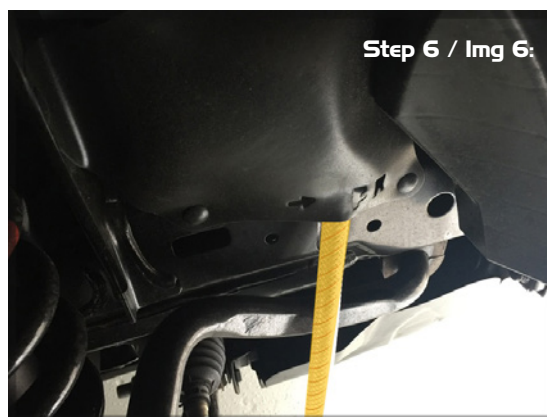

STEP 7: Remove hose from top of crankcase and join to lower outlet of Provent unit then tighten hose clamps.

STEP 8: Join hose on Top Provent fitting to the top of the crankcase fitting and tighten clamps.

