




WARNING: Engine damage will occur if incorrectly connected. Please follow Installation Guide


Mann Provent 200 Catch Can Kit Install Guide

- STEP 1:** Ensure Engine is OFF and cool enough to work on.
- STEP 2:** Identify OEM Hose (between Air Intake & Crank Case Outlet).
- STEP 3:** Identify install area (below power steering - driver's right side) (img.2).
- STEP 4:** Before attaching Provent to bracket:
- Fit Drain Hose to the base of the Provent Unit
 - Feed Drain Hose down through the engine bay, inside wheel arch
 - Secure with hose clamp & cable ties (img.3)
- STEP 5:** Fit Provent to Bracket, bolt in supplied Strut, secure all (img.4).

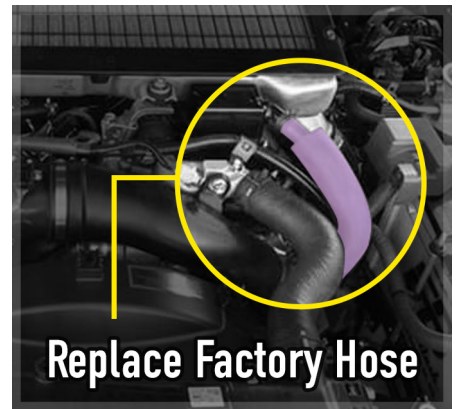

STEP 2:


Replace Factory Hose

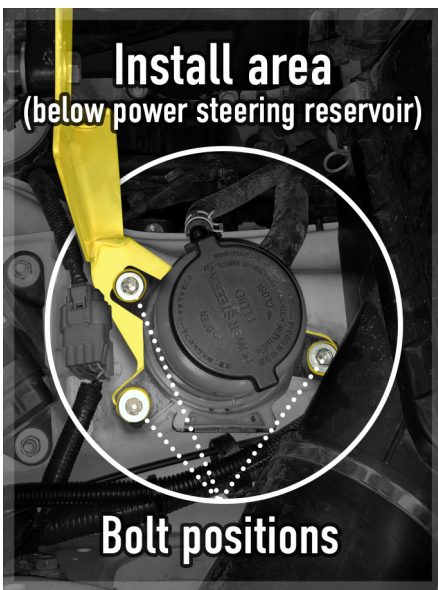

STEP 3:

Install area
(below power steering reservoir)

Bolt positions

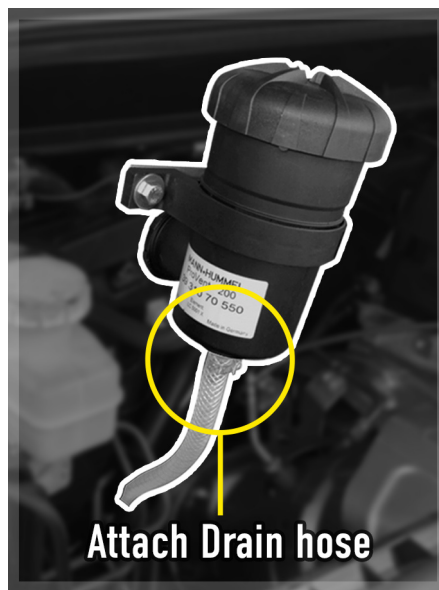

STEP 4:

Attach Drain hose



STEP 5:

Bolt on Provent

Secure Strut

Provent Kit for Toyota Landcruiser 70 Series (2007-on) 4.5L V8 TD VDJ76/78/79 IVD-FTV

KIT No: OS-PROV-30

STEP 7: Attach the supplied longer 'Lower Hose' (in blue) to the Air Intake and run back to the Provent Lower Outlet (see Imgs.5 & 6 and/or Prov-30 Video).


STEP 8: Release the nut holding the OEM hose clamp to place the Lower Hose below, then re-attached.

STEP 9: Attach other supplied 'Upper Hose' (in gold) to the Crank Case Outlet and run back to the Provent Upper Inlet, placing the hose along the Lower Hose (see Imgs. 7 & 8).

STEP 10: Cable tie hoses to avoid rubbing where necessary. Dust off. Job done !




STEP 7a:

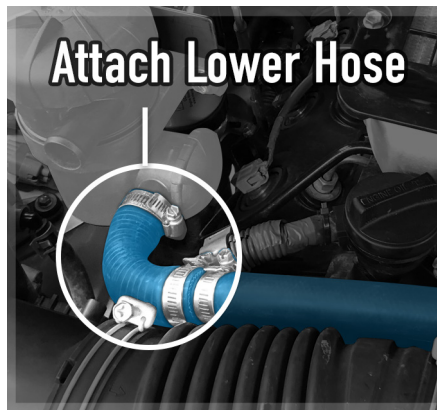

STEP 7b:



STEP 8:

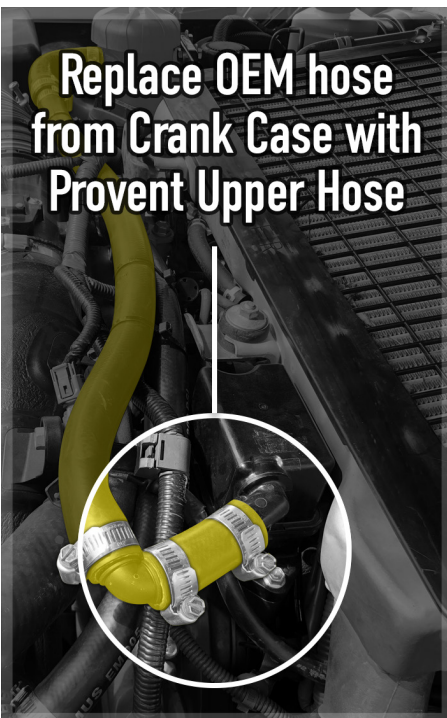

STEP 9a:



STEP 9b:



STEP 10: