

MANN Provent Oil Catch Can Kit for Great Wall GWM Cannon 2021-on ZF 2.0L Turbo Diesel I20kW

KIT No: OS-PROV-46

WARNING: Engine damage will occur if incorrectly connected. Please follow Installation Guide
For vehicles that have travelled over 80,000 kms we recommend an intake manifold clean !

MANN Provent 200 IV Catch Can Kit Install Guide

STEP 1: Ensure Engine is OFF and cool enough to work on.

STEP 2: Identify Install Area - drivers side of engine bay.

STEP 3: Before attaching Provent to bracket:

- Swivel Provent Inlet in to Position
- Attach Drain hose - to the base of the Provent

STEP 4: Identify Fixing Point (**NOTE:** re-use the factory OEM fittings).

STEP 5: Fit Bracket in place (Use QR-Code above to watch Video)


- Feed the Drain Hose down through the engine bay
- Secure with P-clamp. Feed through chassis hole
- Ensure Tap is CLOSED. Tuck up in chasis.



STEP 2:



STEP 3:

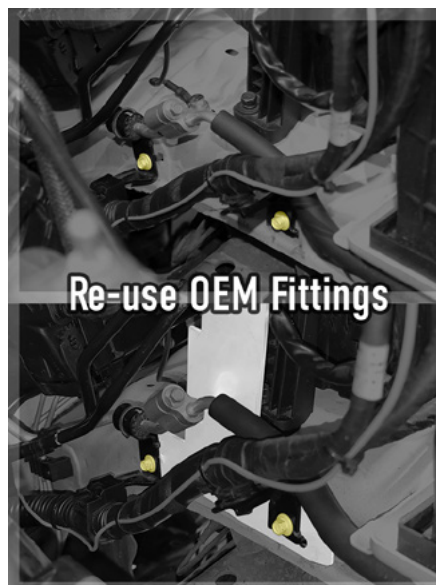

STEP 4:



STEP 5:

MANN Provent Oil Catch Can Kit for Great Wall GWM Cannon 2021-on ZF 2.0L Turbo Diesel 120kW

KIT No: OS-PROV-46

STEP 6: Remove Breather Pipe - between Crankcase and Air Intake

STEP 7: Attach the supplied Straight Hose from the Air Intake and Connect to the Provent Lower Outlet - Secure with clamps

STEP 8: Attach the supplied Articulated Hose from the Crankcase Outlet and Connect to the Provent Top Inlet - Secure with clamps

STEP 9: Cable tie hoses where necessary. Dust off. Job done !

To View the Install Slide Presentation: [SCAN QR-CODE on page 1](#)

