

VEHICLE GWM Tank 300 2022+

PRODUCT Rated Heavy Duty Front Recovery Point

PRODUCT CODE RP-TAN300

NOTE This recovery point is designed to fit the GWM TANK 300 OE front bumper. Each front bar application may be slightly different and may require the modification of brackets and other components.

DURING RECOVERY ALWAYS USE BOTH RECOVERY POINTS

Hardware list:

- 2 x Roadsafe Recovery Points
- 4 x 6mm undertray plate spacers

Tools required:

- Sockets And Ratchets
- Basic Hand Tools
- Spanners

Components list:

- 2 x M10x25mm Hex bolts
- 4 x M12x35mm Hex bolts
- 6 x M10x30mm Hex bolts
- 4 x M12 Washer
- 8 x M10 Washer
- 4 x M12 Spring washer
- 6 x M10 Spring washer

1. Remove OEM Metal Undertray plate. Mounting locations denoted in yellow pictured in *figure 1* and place tray aside.

2. Remove 3 rear bolts on factory tow point/ mounting point.

3. Remove 2 front bolts and OEM tow point/mounting point and set aside.

4. Replace with Roadsafe Recovery Point and corresponding m10 and m12 hardware and finger tighten in place.

The 2 x m12 bolts go in the front holes and the 3 x m10 bolts go in the rear of the recovery points

5. Repeat steps 1 to 4 on opposite side.

6. Tighten appropriately with the correct tools.

7. Re-install OEM undertray plate. Re-install OEM undertray plate. Place two supplied spacers each side to the undertray mounting M10 thread as per the Figure 4. Make sure the undertray plate does not touch the M10 bolt heads.

8. Installation complete.

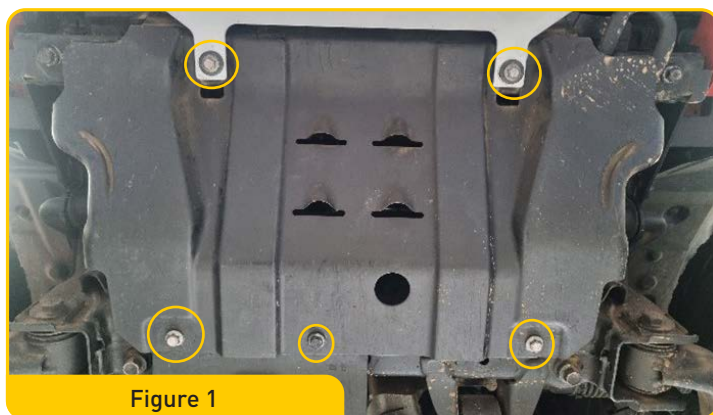


Figure 1



Figure 2



Figure 3



Figure 4

**FEA & PHYSICAL DESTRUCTION TESTING COMPLETED WLL 5000KG TESTED IN AUS NATA LAB
RECOMMENDED FOR 4WD SPECIALIST MECHANICS TO FIT**