



Your 4x4 Accessory Adventure Partner.

FITTING INSTRUCTIONS

SB1-MAZ-02

STOCKMAN BULLBAR

MAZDA BT-50 2021



**ALL EFS BULL BARS HAVE BEEN TESTED AND ARE AIRBAG & ADR COMPLIANT.
ANY MODIFICATIONS TO THE BULL BAR OR ITS MOUNTS WILL VOID THIS COMPLIANCY AND WARRANTY**

BEFORE INSTALLATION

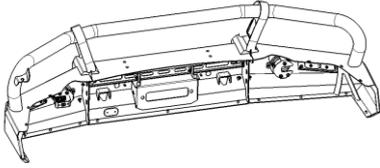
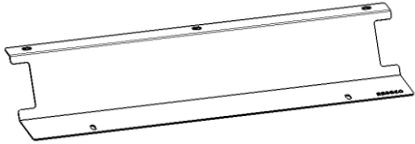
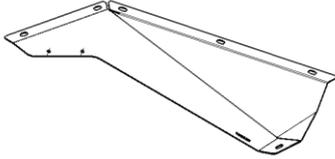
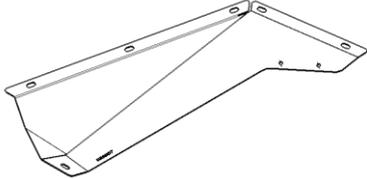
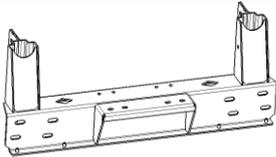
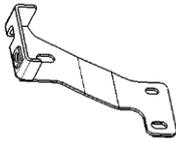
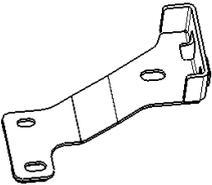
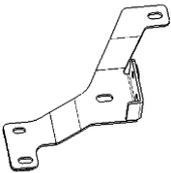
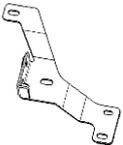

- Please read the instructions completely before installing. This will allow for easy installation and help to avoid scratches or other potential damages to the vehicle.
- images are for reference only and may differ slightly from the actual product you are installing. Whilst images may differ, they share the same assembly instructions.



CARE & CLEANING



- Mild soap may be used to clean the bull bar.
- Check and retighten all the hardware regularly.


It is a condition of our warranty that Bullbar / Rearbars & Side rails / steps are installed by a suitably qualified installer. And is installed in accordance with accompanying installation instructions provided with item.

PARTS LIST

NO.	QTY	NAME	NO.	QTY	NAME
1	1	 Main bull bar Assembly	2	1	 Central Skid plate
3	1	 Skid plate (L)	4	1	 Skid plate(R)
5	1	 Winch Frame	6	1	 Bracket 1 (L)
7	1	 Bracket 1 (R)	8	1	 Bracket 2 (L)
9	1	 Bracket 2 (R)	10	4	 Shim Plate
11	2	 Bolt Plate	12	2	 Fog Lamp Cover
13	1	 License Bracket	14	1	 Head Light bracket (L)

15	1	 Head Light bracket (R)	16	1	 Skid Plate Bracket (L)
17	1	 Skid Plate Bracket (R)	18	1	 Side Wing (L)
19	1	 Side Wing (R)	20	1	 Wrench S=4
21	2	 Spring Washer D6	22	2	 Spring Washer D8
23	8	 Spring Washer D10	24	12	 Spring Washer D12
25	2	 Large Washer D6	26	3	 Large Washer D8
27	16	 Large Washer D10	28	16	 Large Washer D12
29	1	 Hex Nut M8	30	4	 Hex Nut M10
31	10	 Hex Nut M12	32	12	 Hex Nut With Flange M6
33	4	 Hex Nut (Fine Thread) M10x1.25	34	2	 Hex Socket Button Head Screw M6_25

35	1	 Hex bolt(Full Thread) M8_85	36	1	 Hex bolt(Full Thread) M8_100
37	2	 Hex bolt(Full Thread) M10_90	38	2	 Hex bolt(Full Thread) M10_100
39	2	 Hex bolt(Full Thread) M12_35	40	4	 Hex bolt(Full Thread) M12_45
41	4	 Hex Bolt (Fine Thread) M10x1.25_45	42	2	 Flange Hex Head Bolts M6_16
43	23	 Bolt & Washer Assembly M6_20(Large Washer)	44	6	 Bolt & Washer Assembly M6_20(Flat Washer)

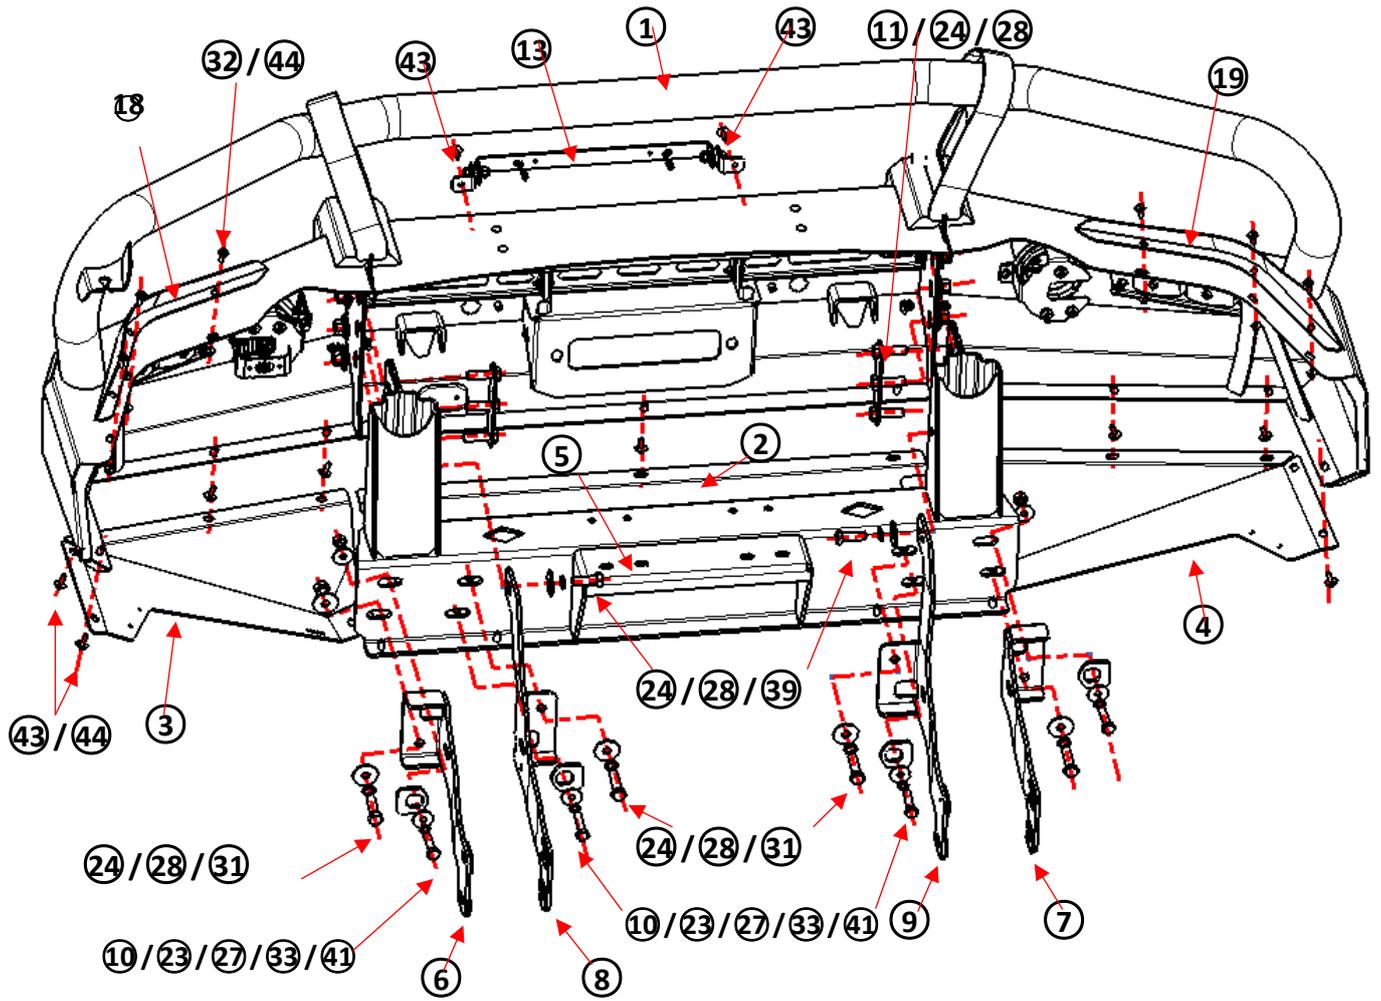

Installation Steps

Step 1: Verify that all parts are present according to the manual. Remove the factory front bumper.

- Remove the air intake clips and move air intake to the side.



- Remove the screws and clips from the front nose cone and remove



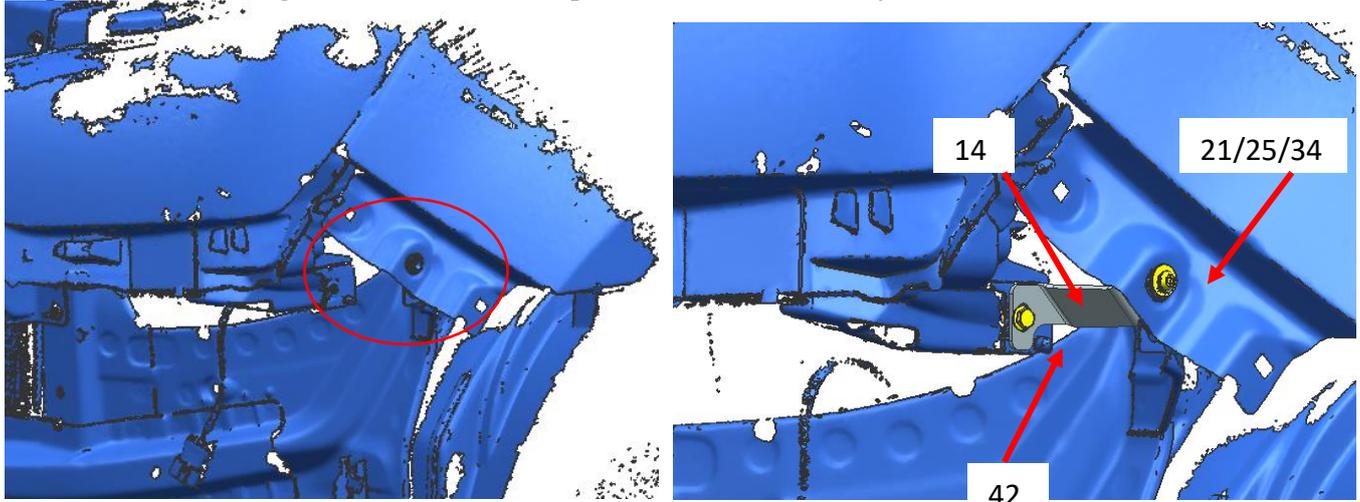
- Remove and retain the clips holding the top cover on
- Remove the screw from the Mazda badge on the grill (From the front)




- Remove the clips from behind the grill
- Remove the 4 clips and screw from inside the wheel arch
- Remove the nut and clips from underside of the front bumper

Step 2: Remove the front intrusion beam, air dam, centre bumper support brackets and the inner guard support brackets.


Step 3: Install head light brackets on lateral position shown below by M6 hardware.



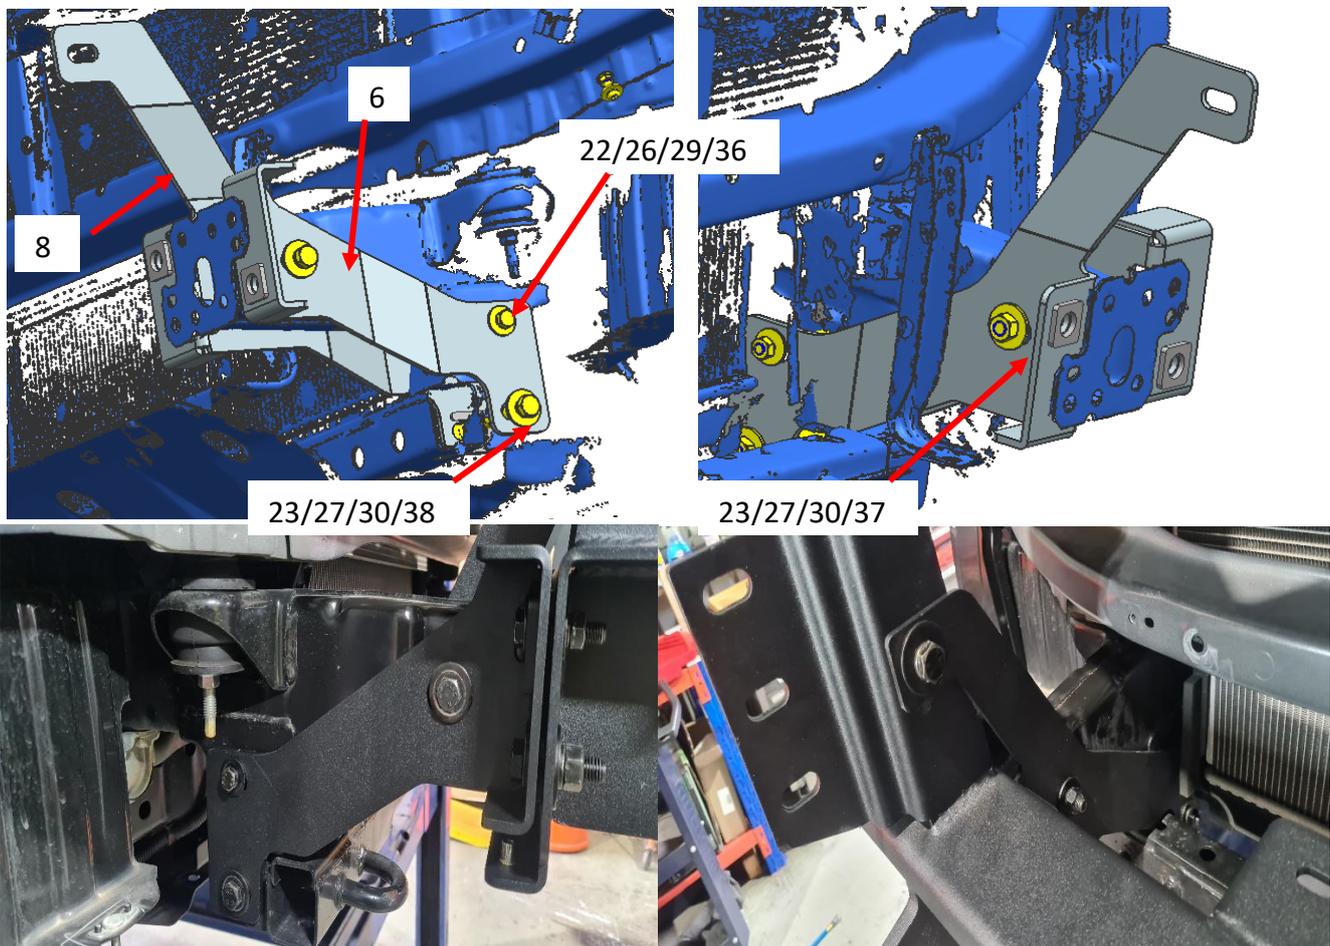Step 4: Install the left and right winch frame brackets as shown.



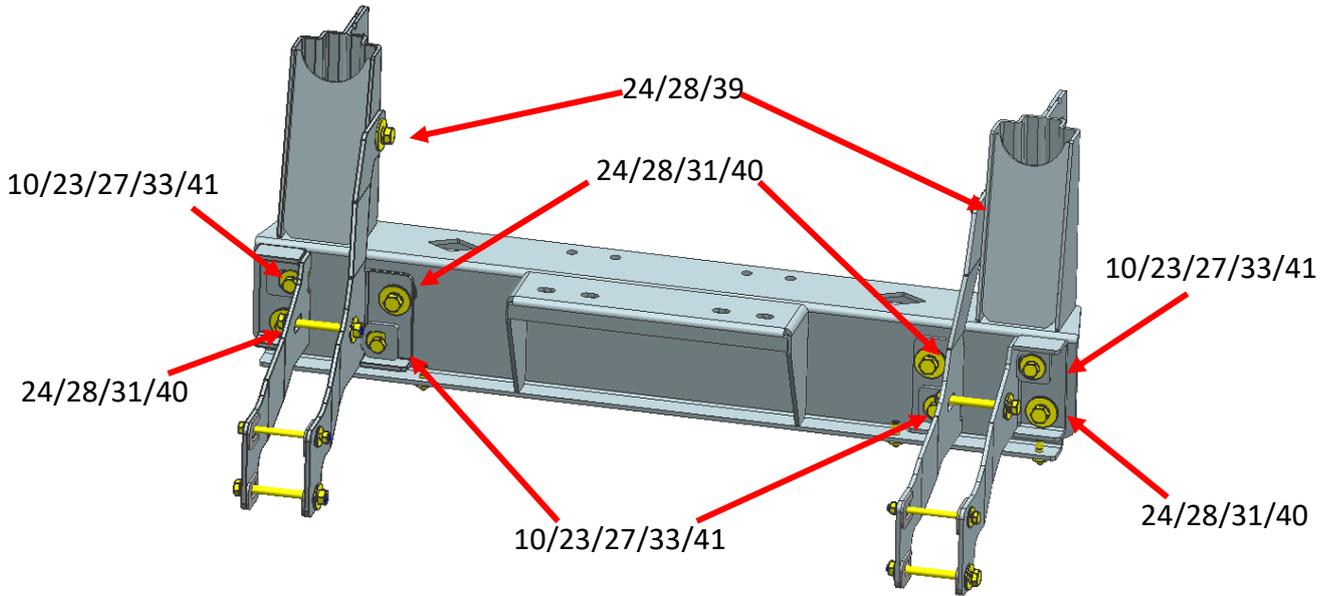Step 5: Install the winch frame with hardware shown below.




If you are installing a winch please proceed with this before going any further.

Step 6: You will need to cut the grill as pictured below and fit back to vehicle before installing main bulbar assembly



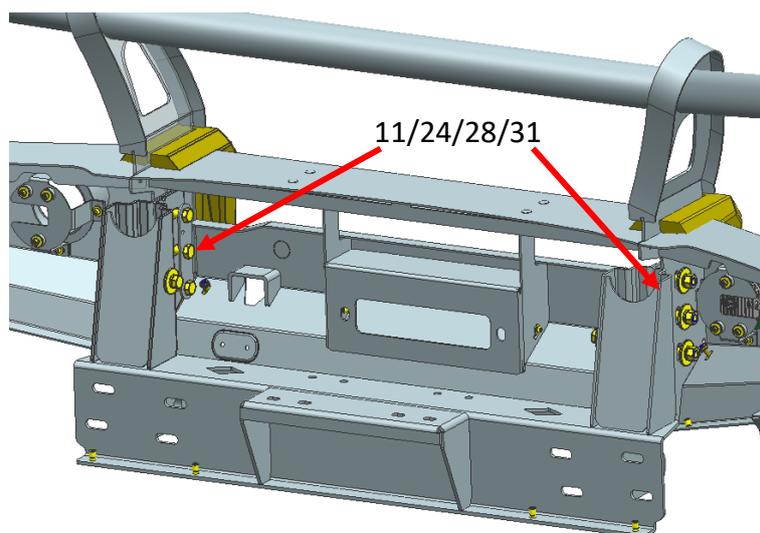Step 7: Install the bull bar main body with hardware shown below




You will need to wire in the park/indicator lamp and fog lights in the bulbar to the vehicles wiring. The wire colours on the plugs are as follows.

Park/Indicator Ground – Yellow
Park Light – Blue
Indicator – Brown


Fog Lights
Ground – Black
Power – Red –

Please use a test light to pick the appropriate wires on the vehicle to attach the plugs to - Ensure that the joined wires are covered with insulation tape or heat shrink - Secure all wiring with cable ties

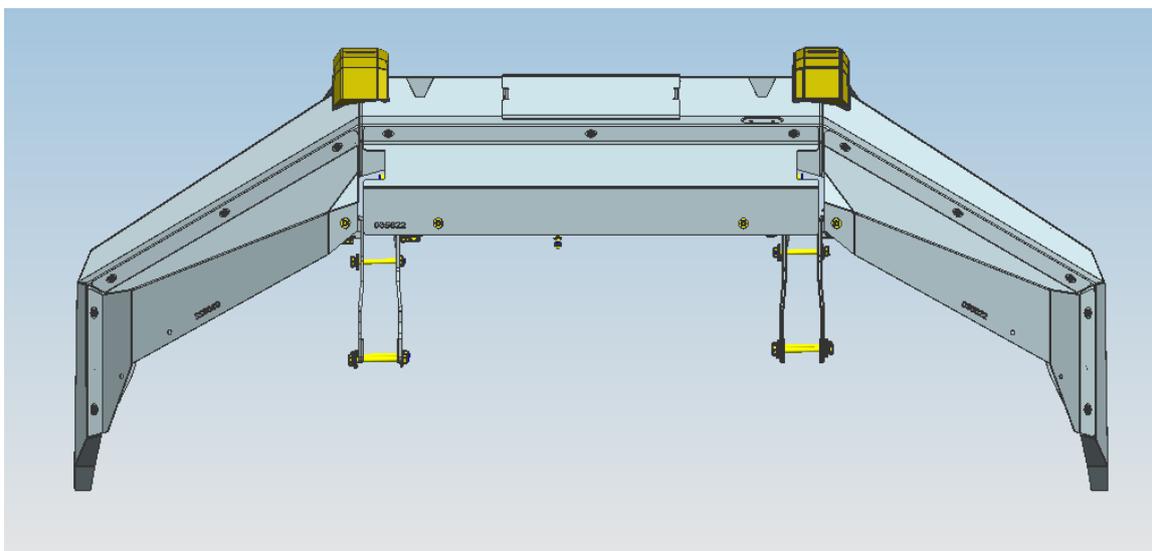
Step 8: Install the bash guards to underside of bulbar.



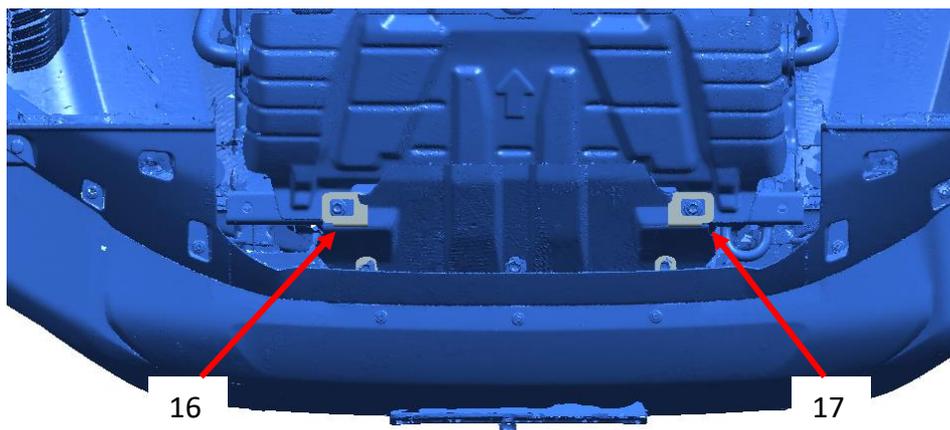Step 9: Install factory bash plate by using factory hardware and supplied brackets.



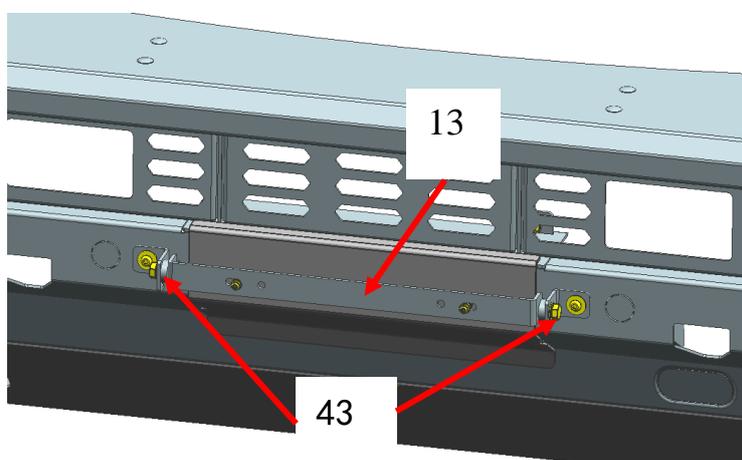Step 10: Installation of the license bracket as below figure shown:



Step 9 Test and make sure that the guard is steadily fixed and fully tighten all hardware.

Step 10 Installation is finished, pick up all tools.

NOTE

Any damages or loss caused by the improper installation and use of EFS Accessories will not be covered by warranty.

Please ensure you leave sufficient spacing between bullbar and guards

