



---

# PROTECTION GUARDS REAR CONTROL ARM

---

TLR635101



SUITED TO:

**GWM TANK 300**



## PRE-INSTALLATION



Read through this installation guide before proceeding.




Fitting time is approx. 30 minutes.



Spanner Socket Set

### FITTING KIT

QUANTITY	PART
1	TLR635101-1 – Control Arm Guard Right
1	TLR635101-4 – Control Arm Guard Left
2	TLR635101-3 – Tag Nut
2	M8 x 25 mm Button Head bolts
2	M8 x 17 mm Flat Washer
2	M8 Spring Washer
2	Cable Tie 150 mm

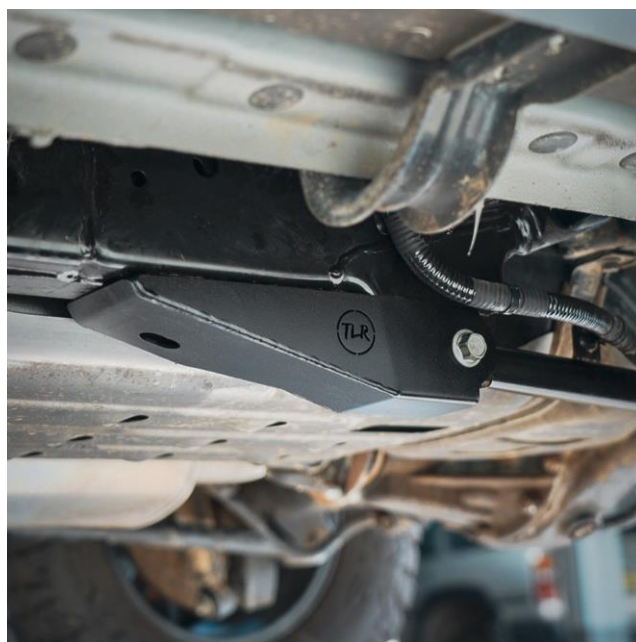

#### NOTE:

These protection guards mount to the Rear control arm chassis mounts.






## FITTING INSTRUCTIONS

1. Starting on the left-hand side, place one of the supplied tag nuts through the hose shown in *photo 1* and align with oval hose in bottom of chassis.

*Note: you will need to bend the tag nut to help align in position.*

2. Remove OEM control arm mounting bolt and rest aside, see *photo 2*.
3. Slide TLR Products Protection Guard over control arm mount and re-install previously removed mounting bolt, See *photo 3*.
4. Install the supplied M8 button head bolt, flat washer and spring washer up through the protection guard and into the previously installed tag nut plate.
5. Repeat steps for opposing side

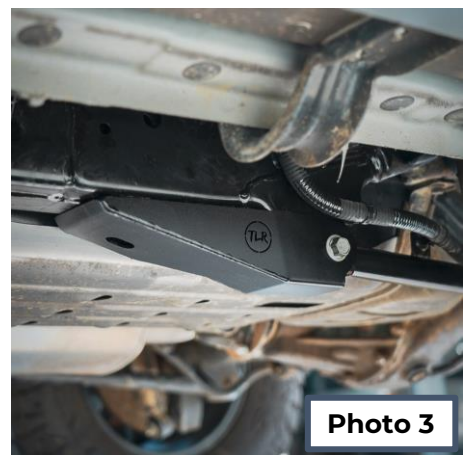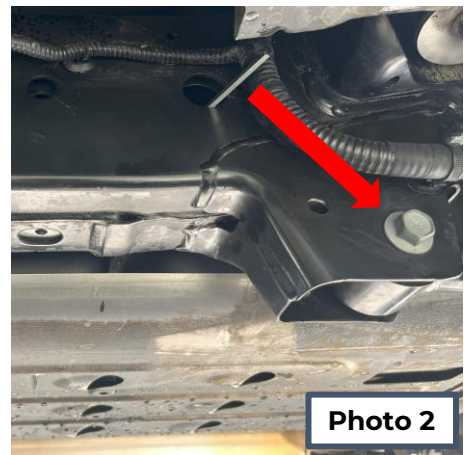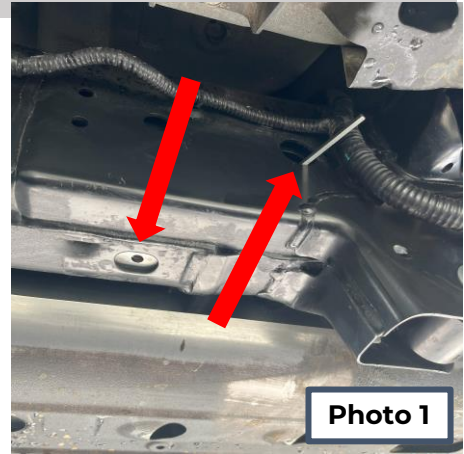

TLR Products  
65 Northville Drive  
Barnsley NSW 2278



[instagram.com/tlrproducts](https://www.instagram.com/tlrproducts)  
[facebook.com/tlrproducts](https://www.facebook.com/tlrproducts)



[hello@tlrproducts.com.au](mailto:hello@tlrproducts.com.au)  
[www.tlrproducts.com.au](http://www.tlrproducts.com.au)