


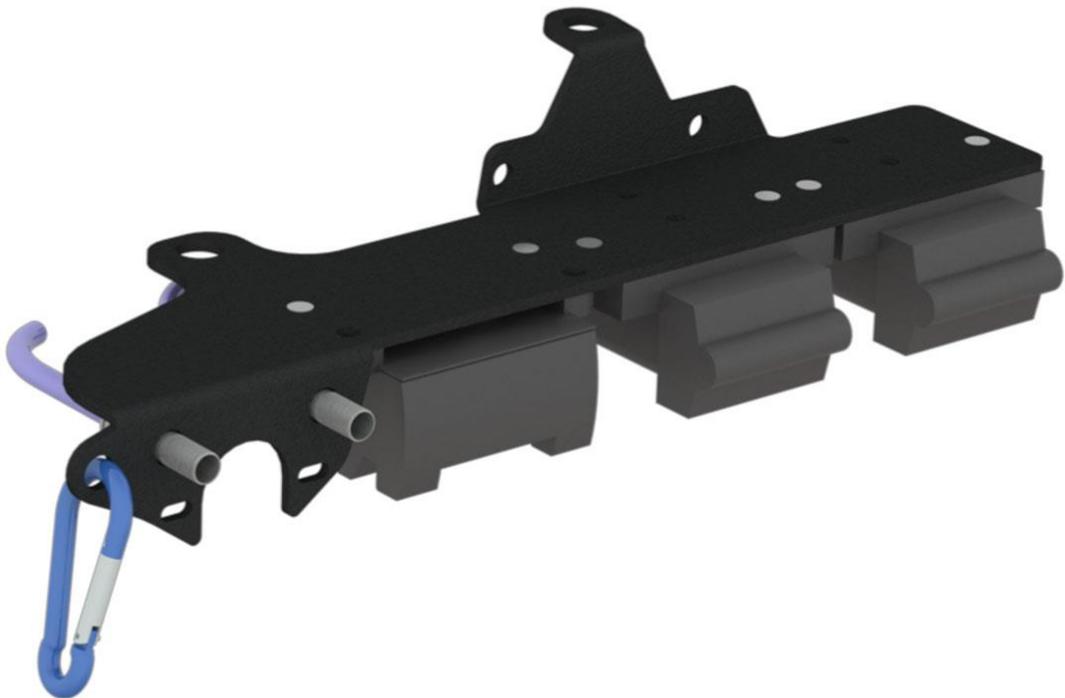

MULTI TRAILER 4 PLUG BRACKET

TLR711502



TOYOTA LANDCRUISER 200 SERIES



PRE-INSTALLATION



Read through this installation guide before proceeding.



Fitting time is approx. 30 minutes.



Allen key set
Spanner
Socket Set

FITTING KIT

QUANTITY	PART
1	TLR711502
1	TLR710008 Safety Dave Plate Adapter
2	M4 x 15 mm SS Button Head Socket Bolt
4	M4 x 20 mm SS Button Head Socket Bolt
2	M4 x 10 mm SS Phillip Pan Head
8	M4 SS Nyloc Nut
1	Cable Tie 150 mm

NOTE:

This TLR Products Multi Trailer Plug Bracket is designed to mount to existing trailer plug bracket mounting bolts and is shaped to the bumper bar of the Toyota Landcruiser 200 series

This bracket is a 4-plug bracket which includes a mounting location for:

- 1 x 7 or 12 pin trailer plug.
- 3 x Additional plugs or connections (Anderson plug, Camera plug, Air Compressor Coupling)
- Break away clip location.



FITTING INSTRUCTIONS

1. We recommend wiring all the plugs before fitting them to the TLR Products bracket.
2. Decide which plugs will be fitted and which holes in the bracket will be used, we have supplied two studs for each plug.
3. Remove the factory trailer plug bracket from rear of vehicle. (Retain factory bolts for fitting later) remove the factory 7/12 pin plug from bracket.
4. Mount all the plugs to the TLR Products bracket.
5. Fit airbag valves in holes supplied.
6. If fitting a reversing camera plug use supplied additional bracket, if using a Safety Dave style camera plug, fit connector to adaptor plate using a cable tie as per **photo 1** and fit adapter plate to additional camera plug bracket
7. Fit the bracket to the vehicle using the factory bolts removed earlier.



PHOTO 1



hello@tlrproducts.com.au
www.tlrproducts.com.au



instagram.com/tlrproducts
facebook.com/tlrproducts