



---

# PROTECTION GUARD

---

TLR714003



SUITED TO:  
**FORD EVEREST NEXT-GEN SERIES**



# PRE-INSTALLATION



Read through this installation guide before proceeding.



Fitting time is approx. 20 minutes.



Basic spanner and socket set, Allen keys,

FITTING KIT	
QUANTITY	PART
1	TLR714003
2	M6 x 12 mm Button Head Socket
2	M6 Nyloc Nut
4	M6 Flat Washer



PHOTO 1



PHOTO 2

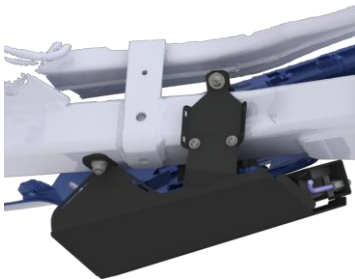


PHOTO 3

**NOTE:**  
This TLR Products Protection Guard is design to suit TLR714003 - Ford Everest Next-Gen Trailer Plug Bracket.



## FITTING INSTRUCTIONS

1. Ensure the TLR714003 main bracket is installed, and all plugs are in place.
2. Remove M8 nut previously installed on trailer plug bracket tag bolt. **Photo 1.**
3. Fit Guard into place by locating mounting tags up through slots in Main trailer plug bracket. **Photo 2.**
4. Finalise mounting the guard using the M8 nut removed in previous step and M6 hardware. **Photo 3.**



TLR Products  
65 Northville Drive  
Barnsley NSW 2278



[hello@tlrproducts.com.au](mailto:hello@tlrproducts.com.au)  
[www.tlrproducts.com.au](http://www.tlrproducts.com.au)



[instagram.com/tlrproducts](https://www.instagram.com/tlrproducts)  
[facebook.com/tlrproducts](https://www.facebook.com/tlrproducts)