


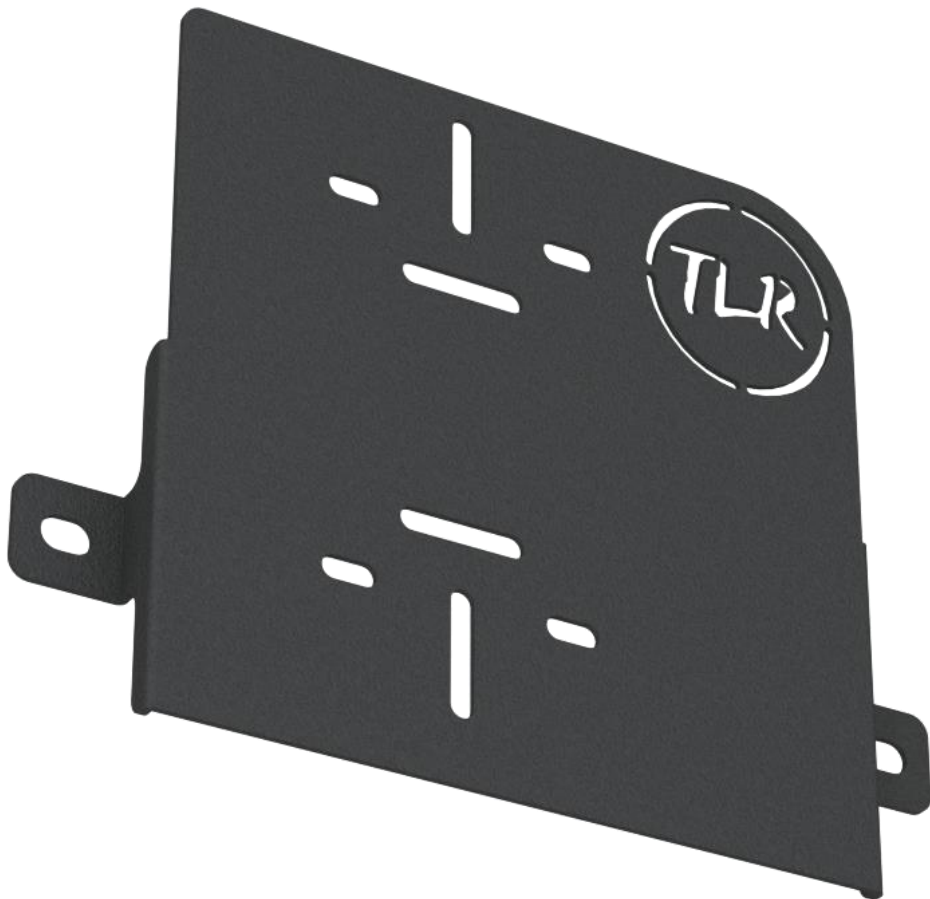

UHF BRACKET ABOVE GLOVE-BOX

TLR741202



SUITED TO:

TOYOTA LANDCRUISER 70 SERIES RANGE



PRE-INSTALLATION



Read through this installation guide before proceeding.



Fitting time is approx. 30 minutes.



Spanner Socket Set

FITTING KIT

QUANTITY	PART
1	TLR741202 – Mounting Bracket
2	M6 x 12 mm Button Head Bolts
2	M6 x 12 mm Flat Washers
2	M6 Spring Washers
4	M4 x 10 mm Phillips Head Bolts
4	M4 Nyloc Nuts
2	Cable Tie 150 mm

NOTE:


This Mounting Bracket locates the UHF unit in the cavity above the glove box area.





FITTING INSTRUCTIONS

1. Remove the Glove Box, this is done by opening the glove box and pressing both sides inwards to clear the retainers, once you have done this you can then lift the glove box up off the bottom hinge.
2. Mount the UHF Unit to the TLR Products Bracket using the M4 hardware supplied.
NOTE: Orientate the module as per photo, this ensures easy routing for wiring etc.
3. Install the UHF/Mounting Bracket assembly to the 2 x OEM captive nuts using the M6 hardware supplied as per photo.
4. Complete all wiring for the UHF before re-installing the glove-box to finish installation.

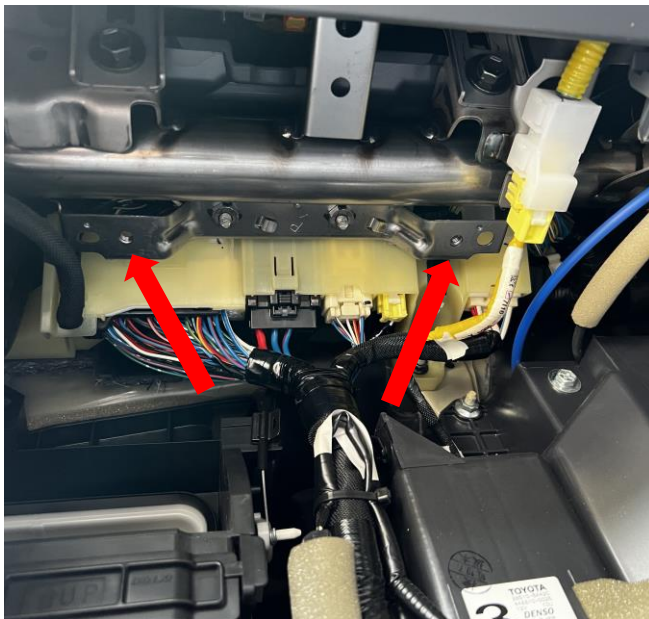

[instagram.com/tlrproducts](https://www.instagram.com/tlrproducts)
[facebook.com/tlrproducts](https://www.facebook.com/tlrproducts)



hello@tlrproducts.com.au
www.tlrproducts.com.au



TLR Products
65 Northville Drive
Barnsley NSW 2278