




UHF BRACKET FIREWALL AREA

TLR744011

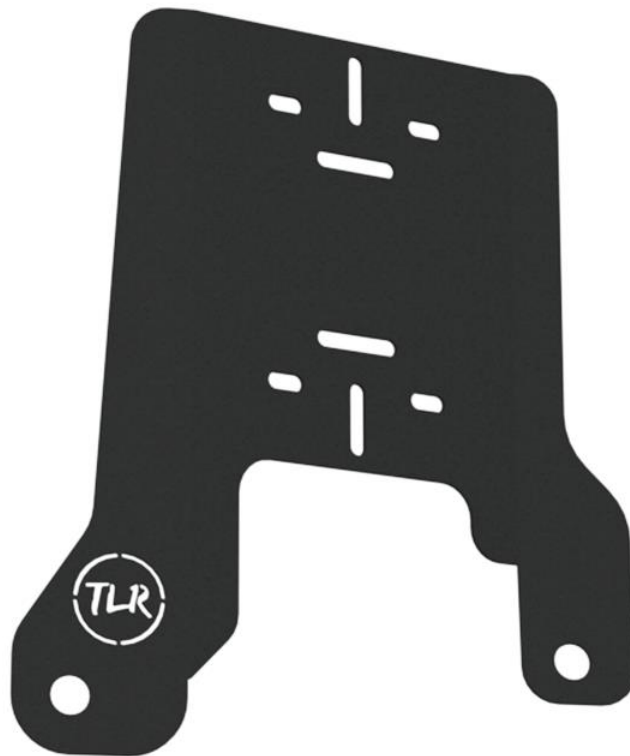

SUITED TO:

**FORD RANGER/RANGER RAPTOR/
EVEREST – NEXT GEN SERIES**



PRE-INSTALLATION



Read through this installation guide before proceeding.




Fitting time is approx. 15 minutes.



Spanner Socket Set

FITTING KIT

QUANTITY	PART
1	TLR744011 – Mounting Bracket
2	M8 Nyloc Nuts
2	M8 x 17 mm Flat Washer
4	M4 x 10 mm Phillips Head Bolts
4	M4 Nyloc Nut

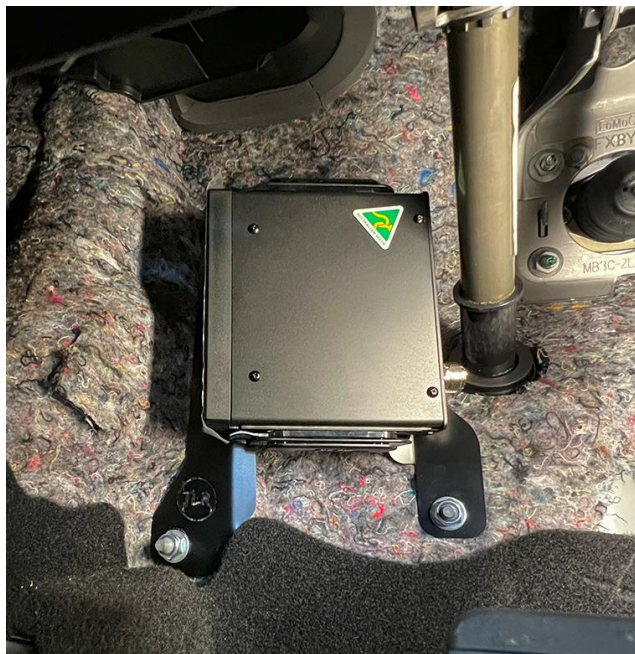

NOTE:

This TLR Products UHF Bracket is designed to suit all Next Gen variants and locates in the driver side footwell. Compatible with Automatic Models only.



FITTING INSTRUCTIONS

1. Install the chosen UHF Module to the TLR Products mounting bracket using the M4 Hardware supplied.
See Photo 1.
2. Locate the 2 x Unused M8 mounting studs on the firewall in the driver's side footwell area, Mount the UHF and mounting bracket assembly using the M8 Nyloc nuts supplied.
See photo 2.
3. Complete all require wiring to complete installation.



[instagram.com/tlrproducts](https://www.instagram.com/tlrproducts)
[facebook.com/tlrproducts](https://www.facebook.com/tlrproducts)



hello@tlrproducts.com.au
www.tlrproducts.com.au



TLR Products
65 Northville Drive
Barnsley NSW 2278