




SOLAR PANEL BRACKETS

TLR760001

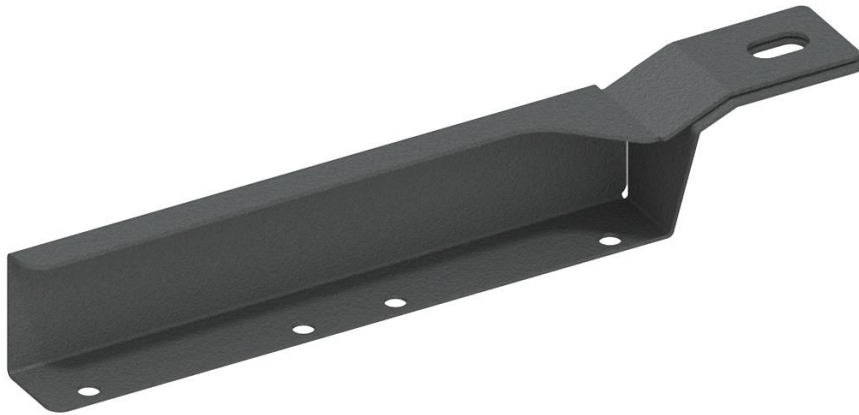

SUITED TO:

RHINO RACK VORTEX/HEAVY DUTY RACK



PRE-INSTALLATION



Read through this installation guide before proceeding.



Fitting time is approx. 30 minutes.



Allen key set, drill/ drill bit 6.5 mm, Phillips head screwdriver, spanner

FITTING KIT	
QUANTITY	PART
4	TLR760001
4	M8 Channel Nuts
4	M8 x 16 mm SS Button Head Socket
4	M8 x 20 mm SS Button Head Socket
4	M8 x 20 mm SS Flat Washer
4	M8 SS Spring Washer
16	M6 x 12 mm SS Pan Phillips Head
16	M6 x 20 mm SS Flat Washer
16	M6 Nyloc Nut




NOTE:
The brackets are designed to withstand the elements and provide a stable mounting surface for the solar panels while being both lightweight and durable

Will not fit Thule Roof Bars



FITTING INSTRUCTIONS

1. Measure the distance between the crossbars centre channel (measurement X) as this will determine where the brackets are bolted to the solar panel. **Per Photo below**
2. Using the measurement taken from the crossbars centre channel place the brackets on the panel, mark the holes for the bolts.
3. Remove the brackets and drill the holes marked in previous step using a 6.5 mm drill bit and stopper depth of 5 mm.
4. Place brackets on panel, fasten to panel using supplied M6 x 12mm bolts, M6 washer and nyloc nuts.
5. Using the channel nuts and bolts supplied fix to crossbars.
6. M8 x 16 mm Button Head Socket for Vortex Aero Bars.
7. M8 x 20 mm Button Head Socket for Heavy Duty Bars.

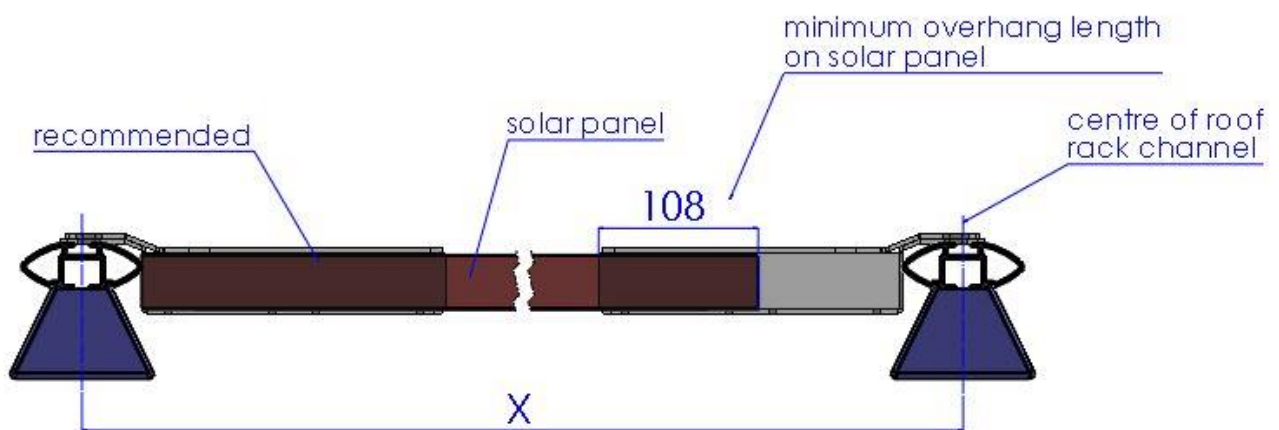

instagram.com/tlrproducts
facebook.com/tlrproducts



hello@tlrproducts.com.au
www.tlrproducts.com.au



TLR Products
65 Northville Drive
Barnsley NSW 2278