




ELECTRICAL ACCESSORY BRACKET

TLR811203

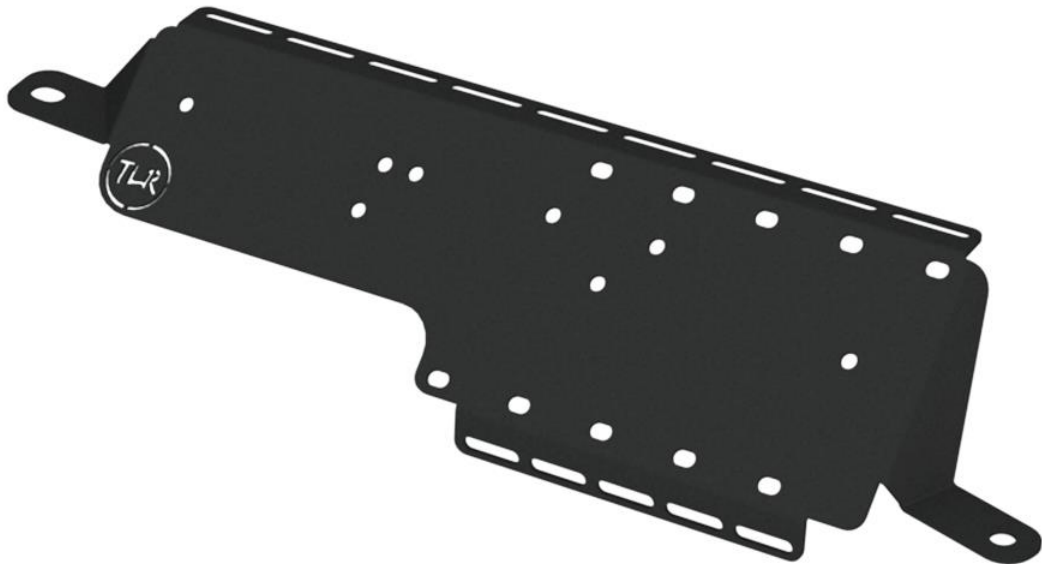

SUITED TO:

**TOYOTA LANDCRUISER 70 SERIES
FACELIFT RANGE 2024 on**



PRE-INSTALLATION



Read through this installation guide before proceeding.




Fitting time is approx. 20 minutes.



Spanner
Socket Set
Screwdriver

FITTING KIT	
QUANTITY	PART
1	TLR811203 – Electrical Accessory Bracket
1	M8 x 20 mm Hex Head Bolt
1	M8 Spring Washer
1	M8 x 20 mm Flat Washer

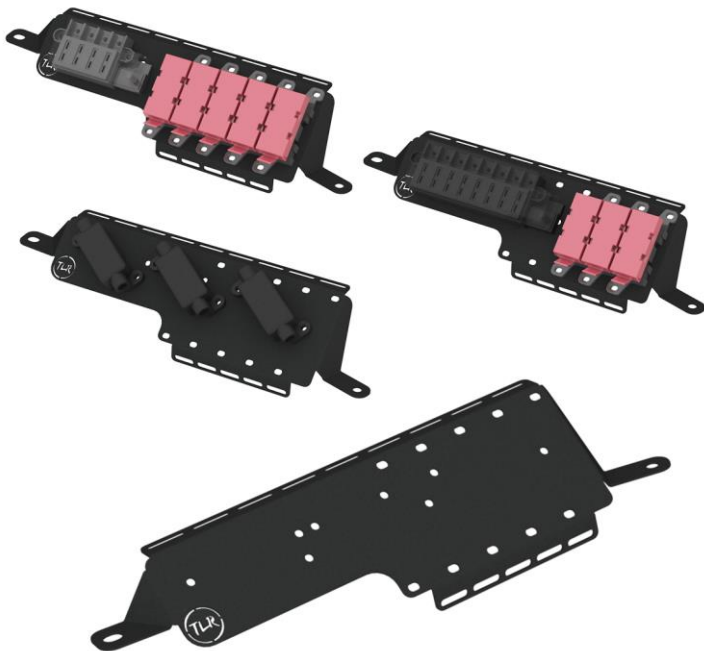


NOTE:
This TLR Products bracket is designed to suit a facelift Toyota Landcruiser 70 series and mounts on the longitudinal member located along side the OEM battery.



FITTING INSTRUCTIONS

1. Decide on which components and orientation you will use and assemble components onto TLR Products Bracket.
2. Remove the OEM M6 washer bottle mounting bolt shown in **Photo 1**.
3. Place the bracket assembly into position and refit the previously removed OEM M6 bolt.
4. Install the supplied M8 hardware into the mounting hold at the other end of the bracket shown in **Photo 2**.
5. Complete all wiring to finish installation and ensure adequate clearance between all electrical components.

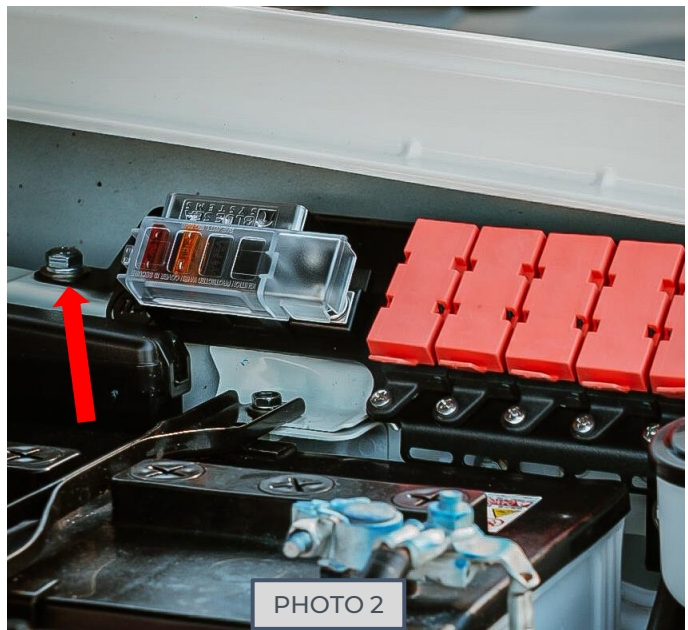

[instagram.com/tlrproducts](https://www.instagram.com/tlrproducts)
[facebook.com/tlrproducts](https://www.facebook.com/tlrproducts)



hello@tlrproducts.com.au
www.tlrproducts.com.au



TLR Products
65 Northville Drive
Barnsley NSW 2278