

XECAPE BULL BAR FOR ISUZU MUX 21-23

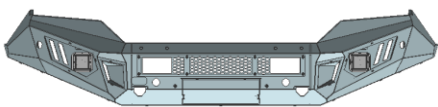
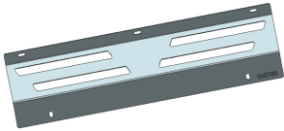
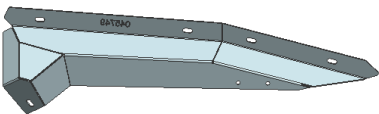
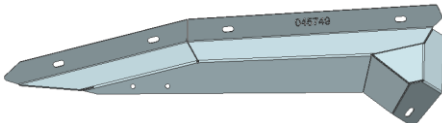
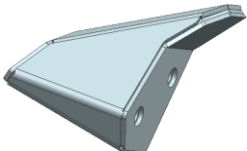
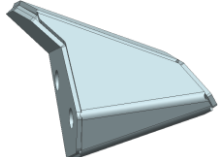
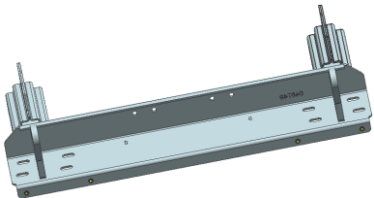
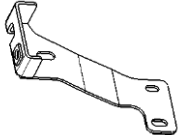
Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.

Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.
-

Parts list

NO.	QTY	NAME	NO.	QTY	NAME
①	1	 Main bull bar Assembly	②	1	 Central Skid plate
③	1	 Skid plate (L)	④	1	 Skid plate(R)
⑤	1	 Infill (L)	⑥	1	 Infill (R)
⑦	1	 Winch Frame	⑧	1	 Bracket -1(L)











INSTALLATION INSTRUCTIONS

⑨	1	A metal bracket with a single hole and a mounting flange.	⑩	1	A metal bracket with a single hole and a mounting flange, mirror image of Bracket-1 (R).
		Bracket-1 (R)			Bracket -2 (L)
⑪	1	A metal bracket with a single hole and a mounting flange.	⑫	1	A small metal bracket with two holes.
		Bracket -2 (L)			Head lamp bracket (L)
⑬	1	A small metal bracket with two holes, mirror image of Head lamp bracket (L).	⑭	1	A metal bracket with a single hole and a mounting flange.
		Head lamp bracket (R)			Skid plate bracket (L)
⑮	1	A metal bracket with a single hole and a mounting flange, mirror image of Skid plate bracket (L).	⑯	2	A long metal bolt with a T-shaped head.
		Skid plate bracket (R)			T-Bolt M10x40
⑰	2	A metal bracket with a single hole and a mounting flange.	⑱	2	A metal plate with four holes and two mounting flanges.
		Light Holder			Bolt plate
⑲	1	A long metal plate with a hole and a mounting flange.	⑳	6	A long metal ribbon with a hole and a mounting flange.
		Foldable License Plate			Ribbon for Harness





Hardware List:

⑳	12	A coiled metal spring washer.	㉑	16	A flat metal washer.
		Spring Washer D12			Large Washer D12
㉒	10	A hexagonal metal nut.	㉓	2	A long metal hex bolt.
		Hex Nut M12			Hex bolt(Full Thread) M12_35
㉔	4	A long metal hex bolt.	㉕	10	A coiled metal spring washer.
		Hex bolt(Full Thread) M12_45			Spring Washer D10
㉖	18	A hexagonal metal nut.	㉗	6	A hexagonal metal nut.
		Hex Nut M10			Hex Nut M10

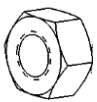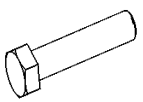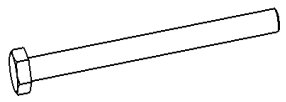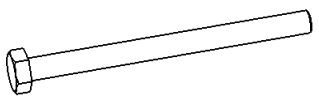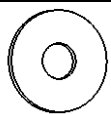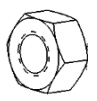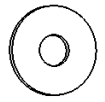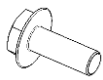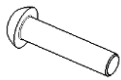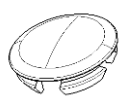
INSTALLATION INSTRUCTIONS

		Large Washer D10			
②9	4	 Hex Nut (Fine Thread) M10x1.25	③0	4	 Hex bolt (Full Thread) (Fine Thread) M10x1.25_45
③1	2	 Hex bolt(Full Thread) M10_90	③2	2	 Hex bolt(Full Thread) M10_100
③3	2	 Spring Washer D8	③4	3	 Large Washer D8
③5	1	 Hex Nut M8	③6	1	 Hex bolt(Full Thread) M8_100
③7	1	 Hex bolt(Full Thread) M8_85	③8	2	 Spring Washer D6
③9	2	 Large Washer D6	④0	2	 Flange Hex Head Bolt M6_16
④1	2	 Hex socket flat round head screw M6_25	④2	10	 Hex Nut With Flange M6
④3	29	 Bolt & Washer Assembly M6_20	④4	1	 Wrench S=4
PARKING SENSOR HOLDER					
④5	4	 Cover	④6	4	 Holder

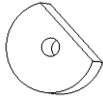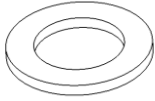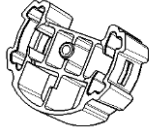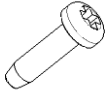INSTALLATION INSTRUCTIONS

④7	4	 M31x1.5 Lock Wing	④8	4	 Foam Packer D20.6X10
④9	12	 Foam Ring (D25-d15.5)	⑤0	4	 Base
⑤1	8	 Lock Screw ST4_15	⑤2	1	 LED light Harness


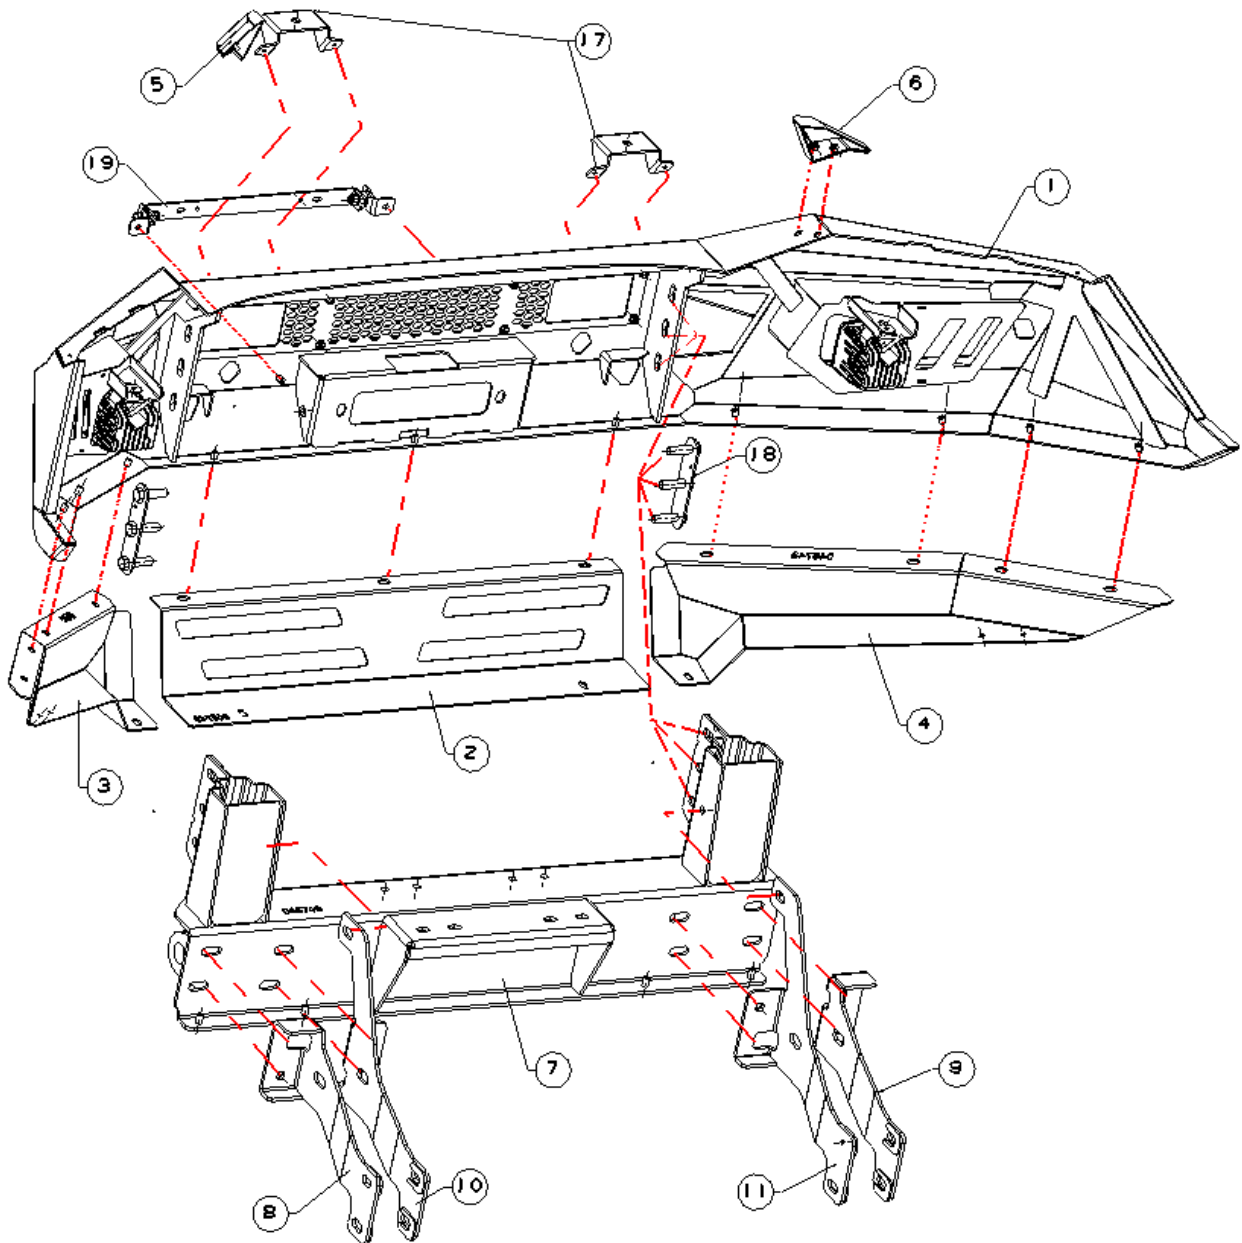
INSTALLATION INSTRUCTIONS




Step 1 Verify that all parts are present according to the manual. Remove the original front bumper and beam.

Step 2 Find the installation position shown in the figure on the side of the headlamp and install the headlamp bracket with the standard part of M6 bolt

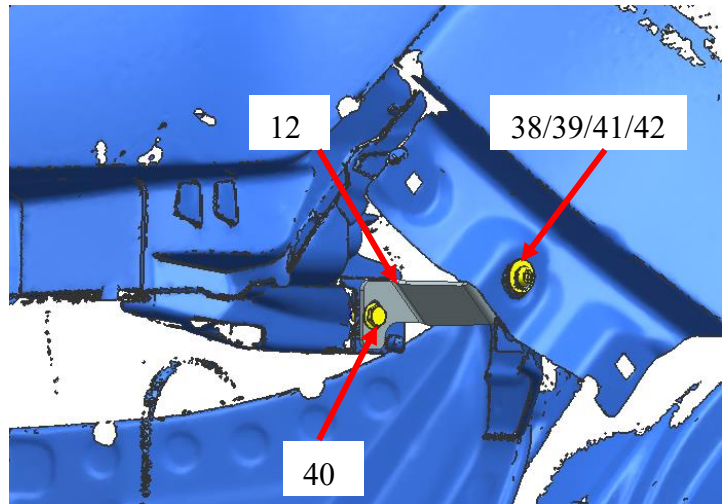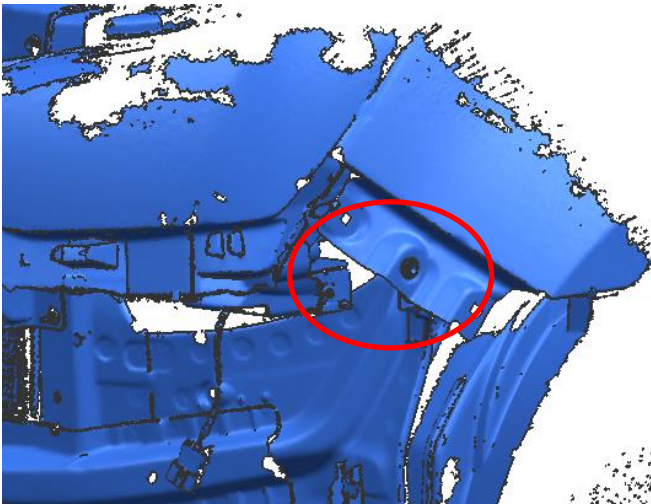
INSTALLATION INSTRUCTIONS



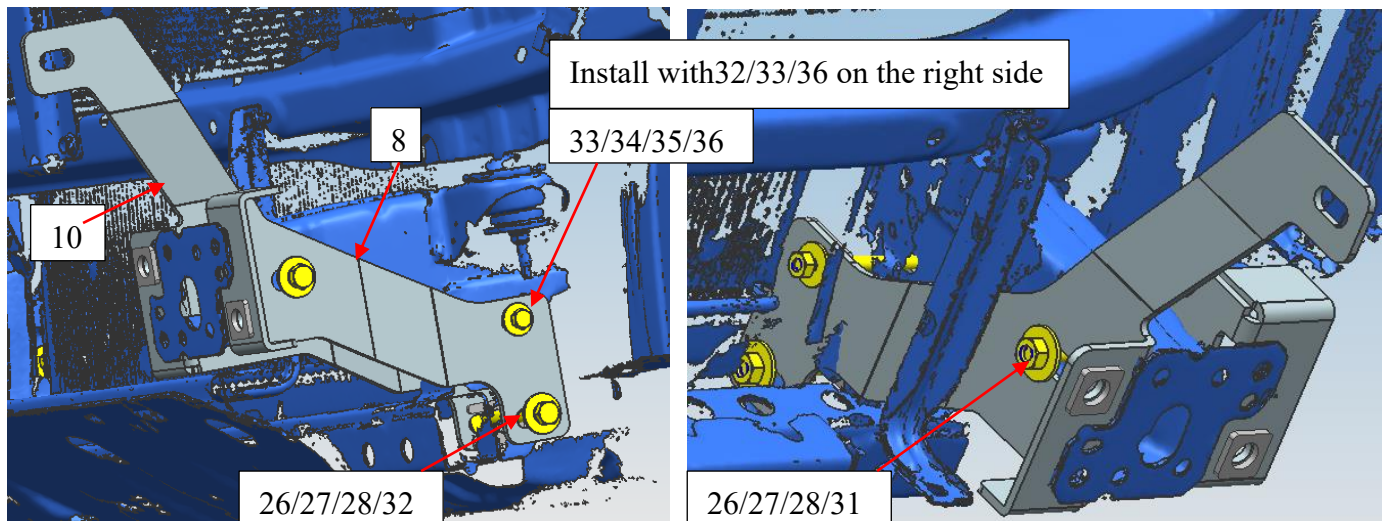Step 3 Install the brackets on the beam according to the serial number of standard parts in the figure below, and the left and right installation methods are the same





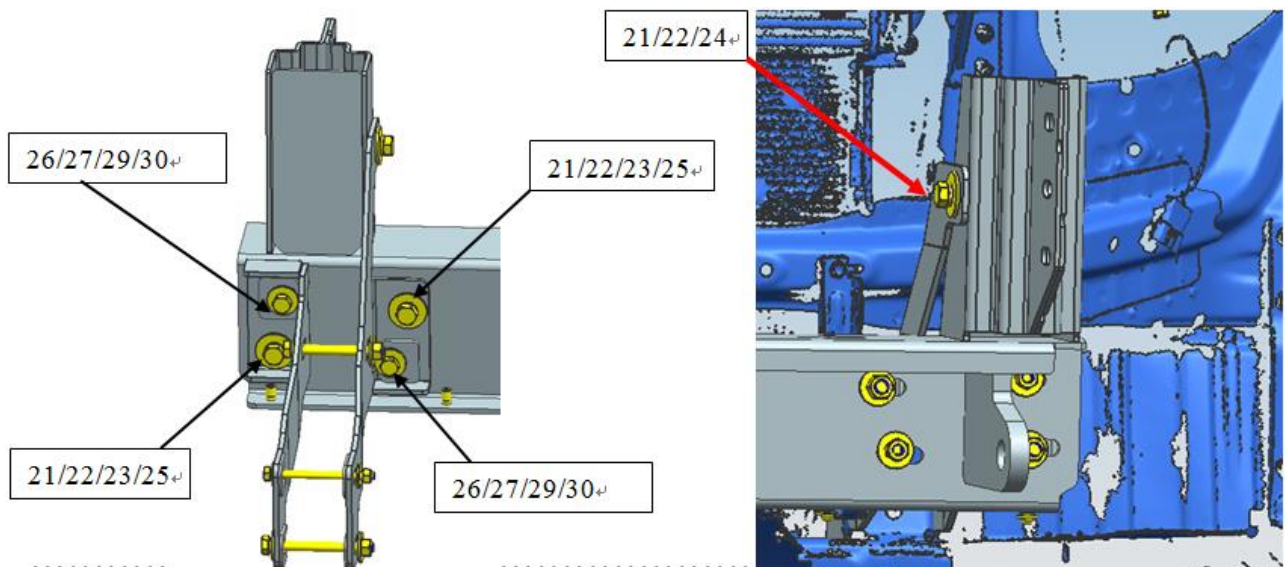Step 4 Connect the brackets and wrench frame in the figure below





Step 5 Install the infill and light holder on the bull bar shown as below.

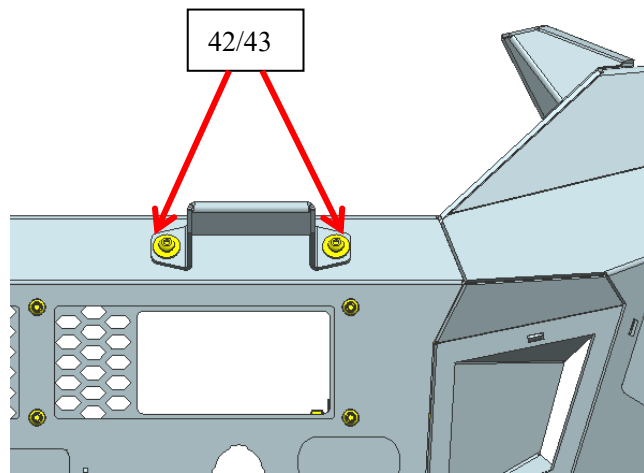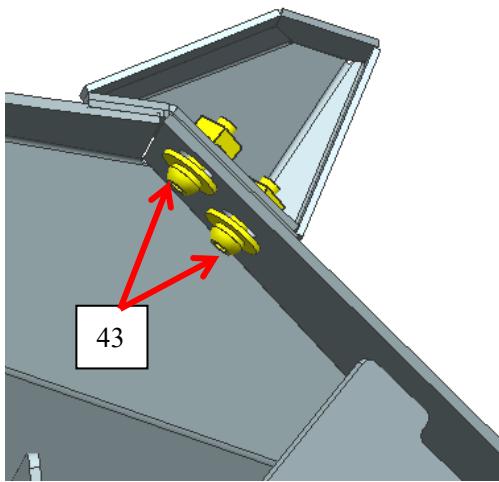
INSTALLATION INSTRUCTIONS



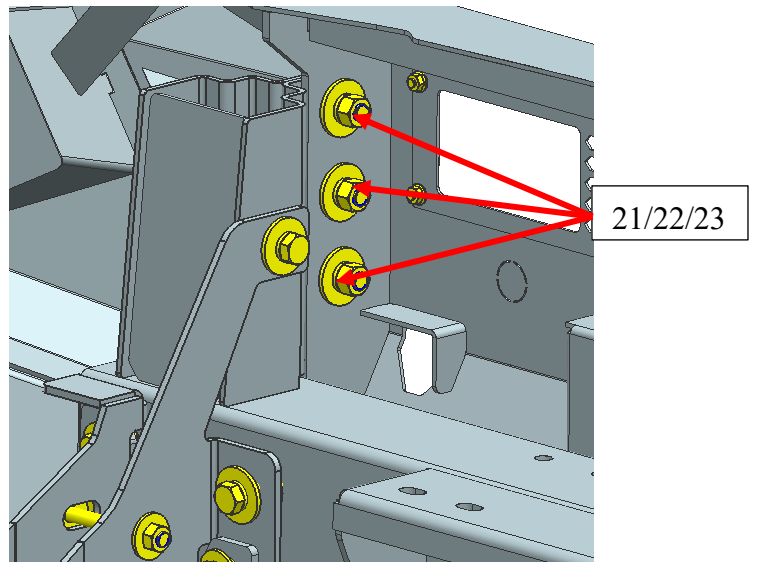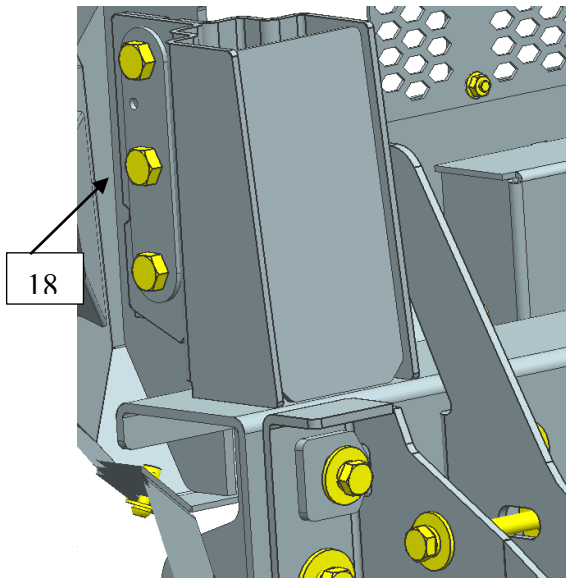
Step 6 Connect the wrench frame and the body like following:



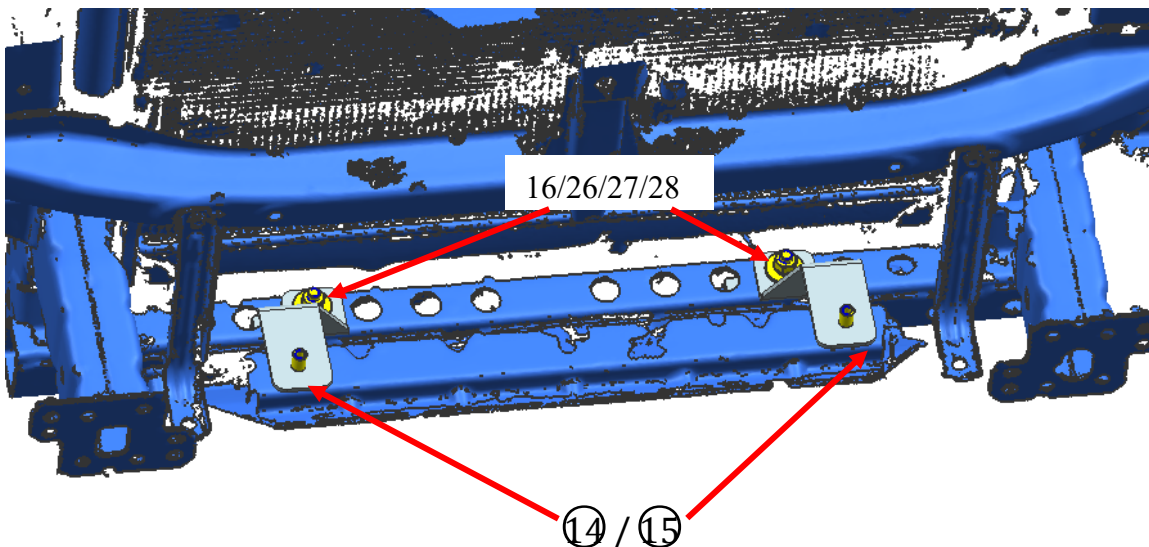
Step 7 Install factory skid plate




INSTALLATION INSTRUCTIONS

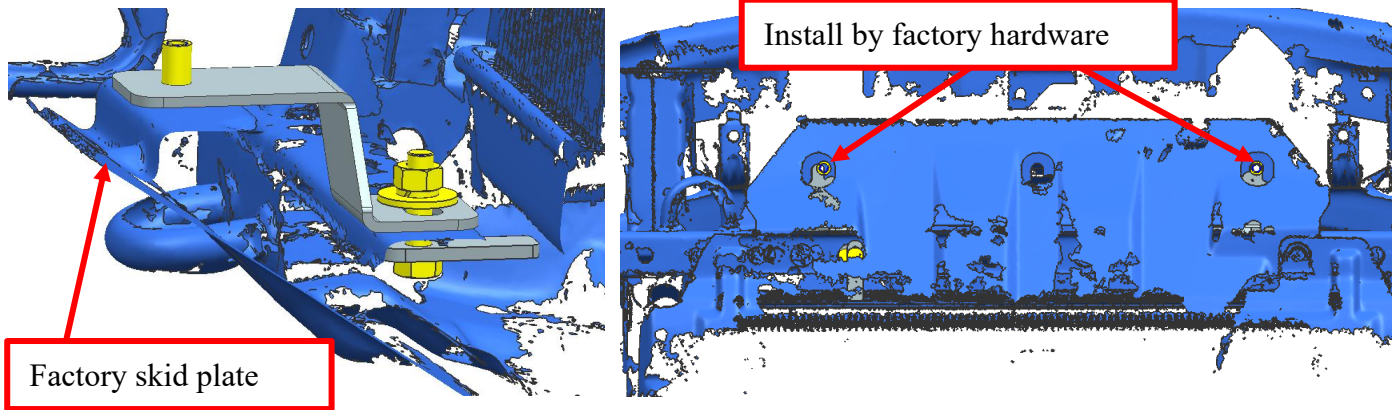

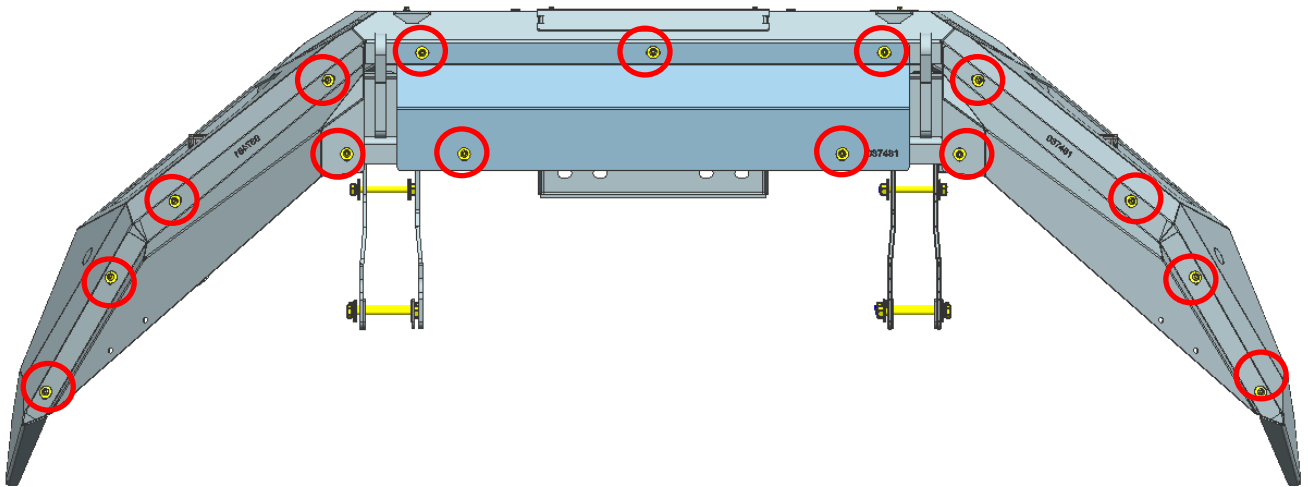Step8 Install the skid plate on the body or wrench frame by using standard part ④③




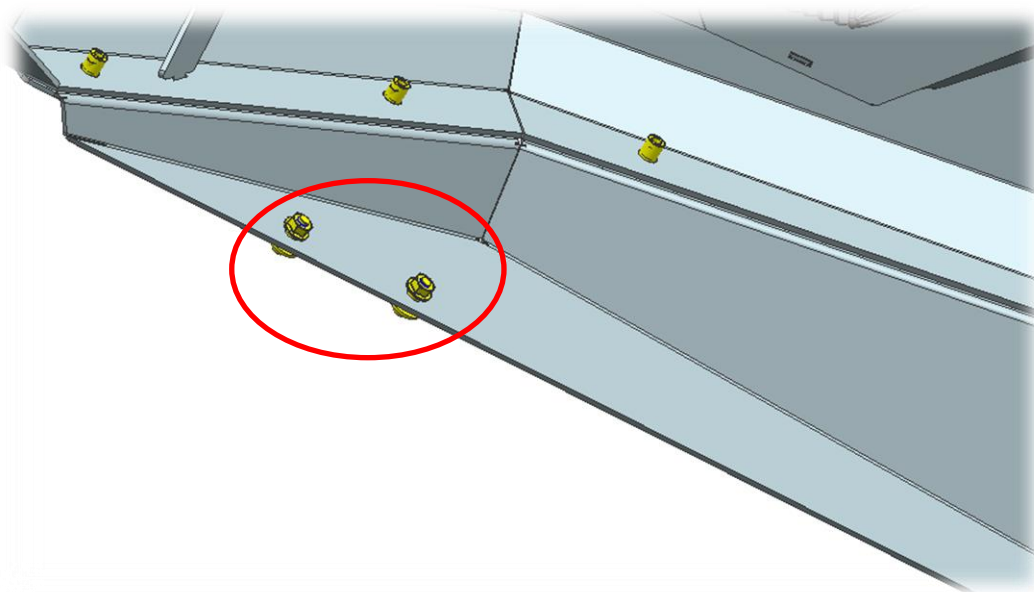Fix the factory mud plate with standard part ④② ④③ on the position in the figure below



INSTALLATION INSTRUCTIONS

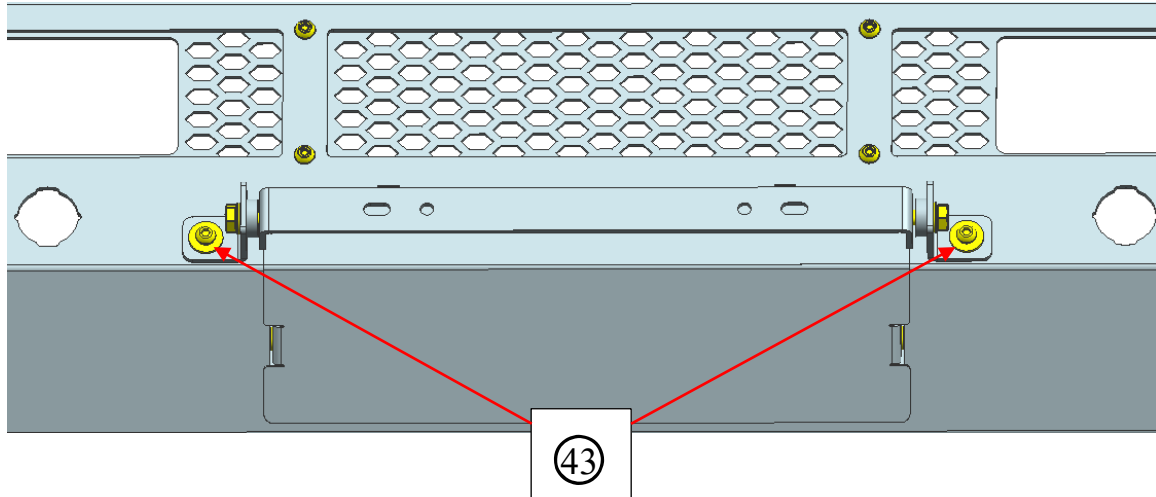Step 9 Install the Foldable License Plate.



Step 10 Test and make sure that the guard is steadily fixed, fully tighten all hardware.

Step 11 Installation is finished, pick up all tools.

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.